



Spot Guard is designed to seal small leaks in radiators when the radiator is out of the vehicle



Directions for using Northern RW0120-1 Spot Guard:

- 1) Remove the radiator from vehicle
- 2) Dilute 1 part Spot Guard to 5 to 10 parts water. Stir well
- 3) Fill the radiator with the mixture
- 4) Cap the radiator with an open stem test plug and add air pressure to the radiator for about 1 minute
- 5) When done, empty the mixture into a reusable container, as the mixture can be reused
- 6) Re-install the radiator