

## 211143 Mounting Brackets

For applications with old design full length brackets (**Figure 1**) please use the provided brackets (**Figure 2**) in the box when installing Northern's 211143 radiator. Due to eliminating the full length side bracket, the upper radiator mounts will now mount directly to the new radiator (**Figure 4**).

**Figure 3** illustrates the proper way to install the provided brackets. All other applications will reuse the original mounting.

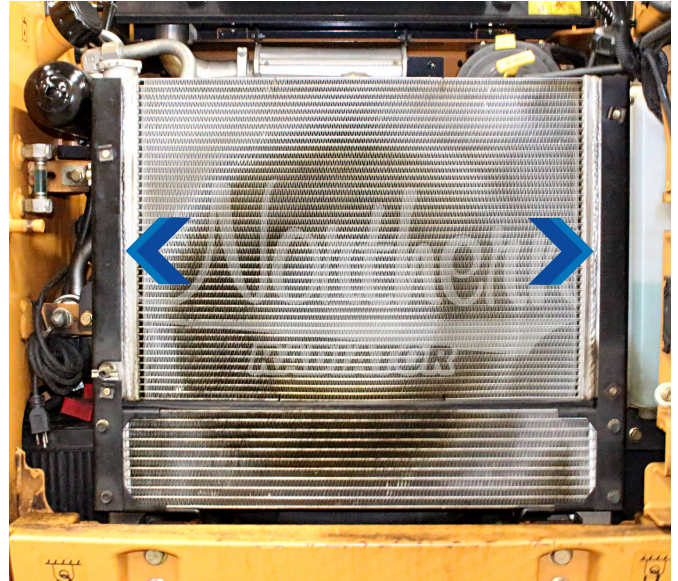


Figure 1


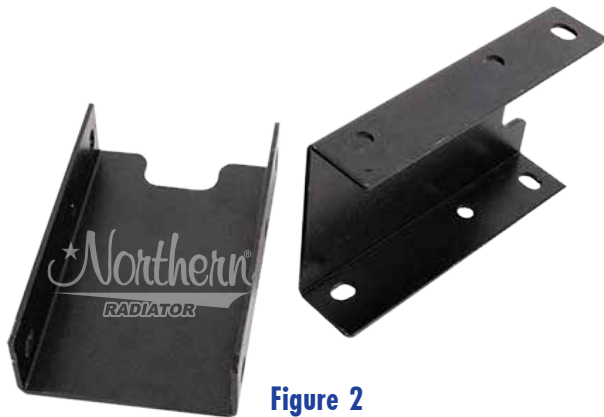


Figure 2



Figure 3

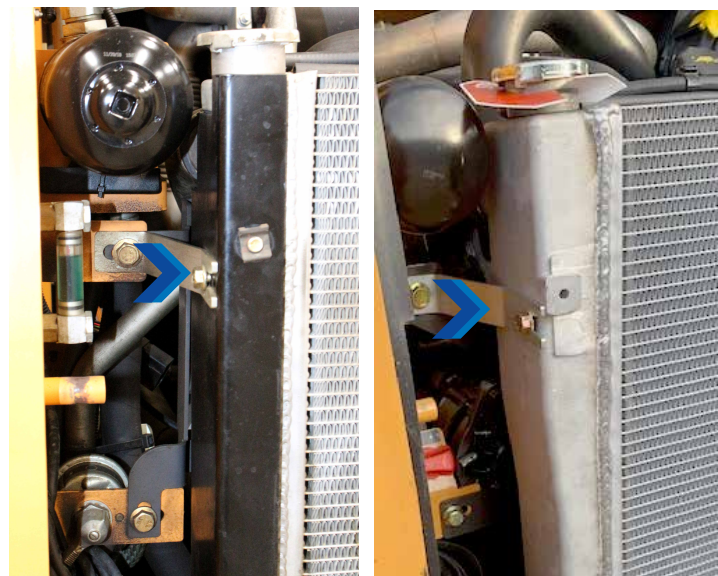

Old

Figure 4

New