


CHARGE AIR COOLER 222328

Heavy Duty Chevy / GM Charge Air Cooler

INCLUDES:

- (1) Instruction
- (1) 1" x 1-1/2" x 38" Foam Strip
- (4) 1/2" x 7/8" Aluminum Spacer
- (4) M6 x 1-1/2" Bolt
- (4) M6 Washers

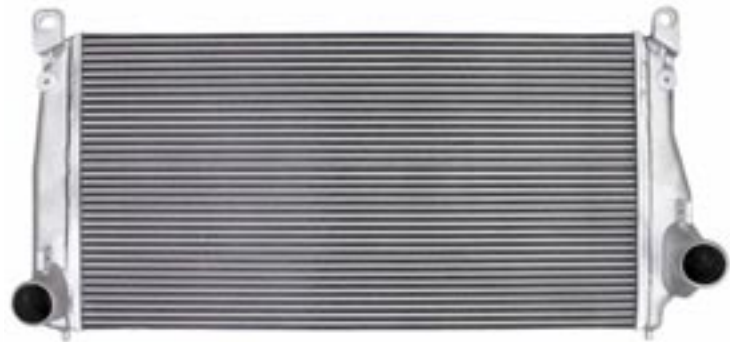

After installing this heavy duty charge air cooler, you will end up with an air gap between the fan shroud and upper radiator support. **(See Photo 1)** A foam strip is included to fill this gap.

Insert the foam strip with the 1" dimension between the shroud and radiator support in this gap. **(See Photo 2)** Use the fan shroud as a template to mark the location for the holes.

Remove the foam strip and drill or cut 1/2" holes in the marked locations. Insert the provided aluminum spacers into the 1/2" holes in the foam strip and reinsert the foam strip into the gap.

Your OE bolts will be too short so use the provided (4) M6 bolts and washers to mount the fan shroud and foam strip instead of reusing the OE bolts.



Photo 1



Photo 2