


RADIATOR 239097

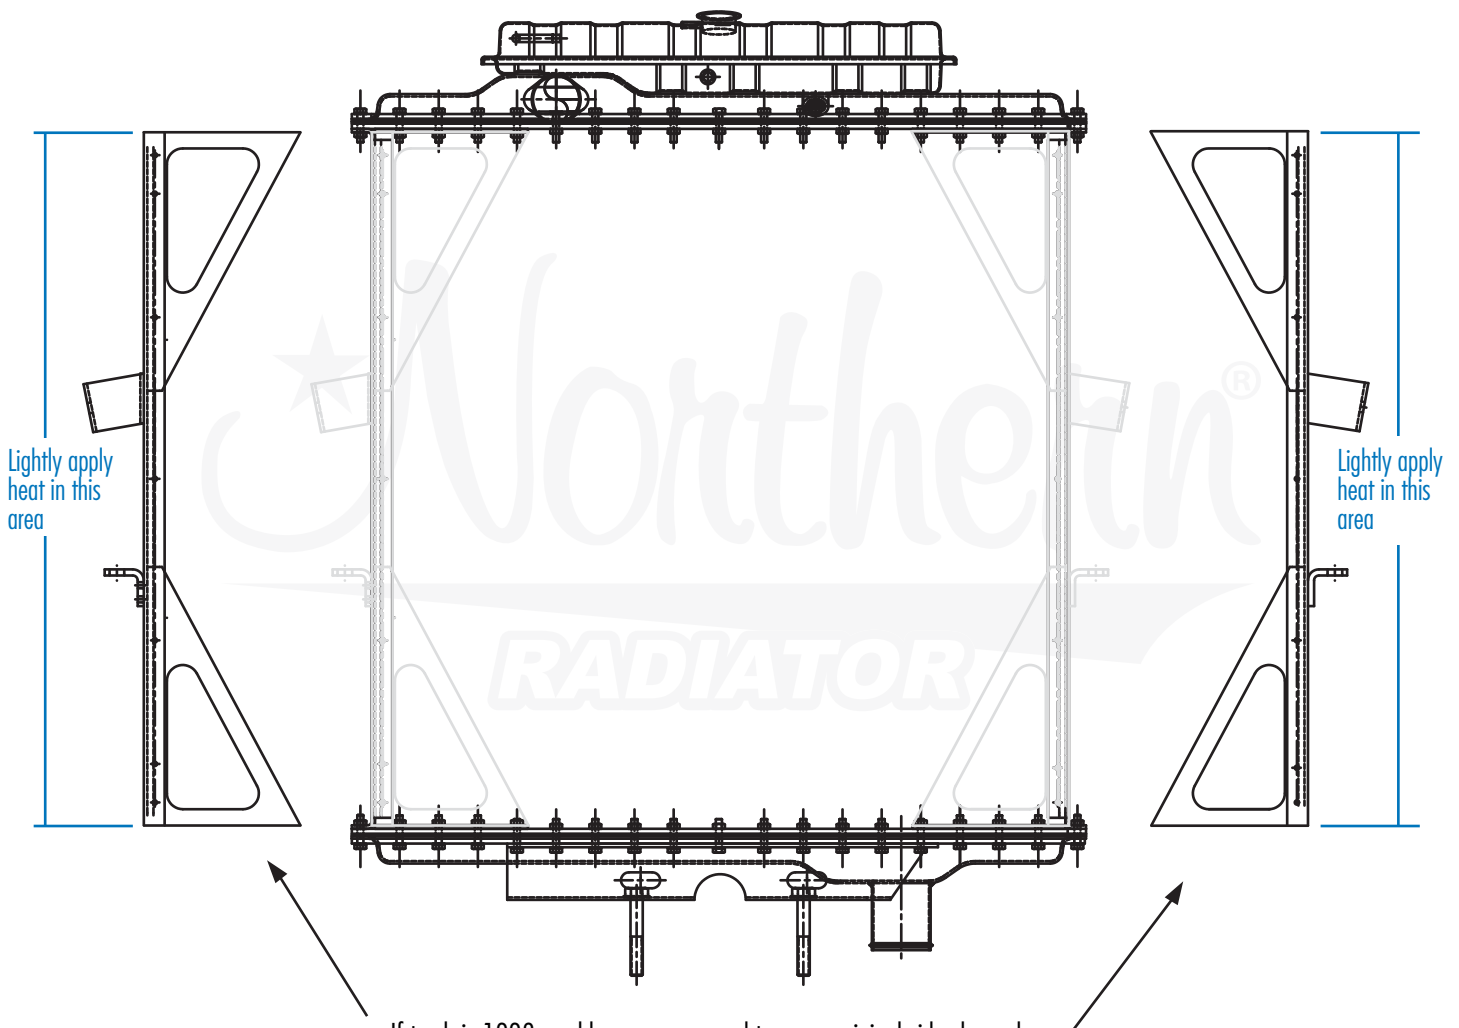

If truck is 1998 or older you may need to reuse original side channels.
NOTE: Remove bolts and apply heat to soften adhesive between core and brackets to remove. On some OEM radiators the side channels are shorter and will require the use of the original reinforcement bars.