




# Medium / Heavy Duty Truck RADIATORS

Since the very beginning copper and brass radiators have been a staple component of most cooling systems. Today you'll still find copper and brass radiators in a variety of industries and applications. But as manufacturing designs and technology have improved, "Plastic Tank/Aluminum Core" product has been and continues to be the original equipment industry standard as a quality replacement to the copper and brass product. In most applications they last longer, they're lighter, and cost less money!

In the Heavy Duty Truck market, Northern Radiator has offered you a choice of copper/brass as well as a plastic /aluminum radiator to various truck models. And where it makes sense we will continue to do so. However, it's very apparent that in many specific part numbers, applications and working environments, **Northern's plastic tank/aluminum radiator is far superior in its performance, longevity and customer satisfaction and has substantially fewer warranty situations.**

As the leader in the cooling industry it's Northern Radiator's obligation to provide you with only the highest quality product available for you to service your customer. The below listing shows the Northern plastic tank/aluminum core radiator that you should be selling, where you may have previously recommended a copper/brass product.

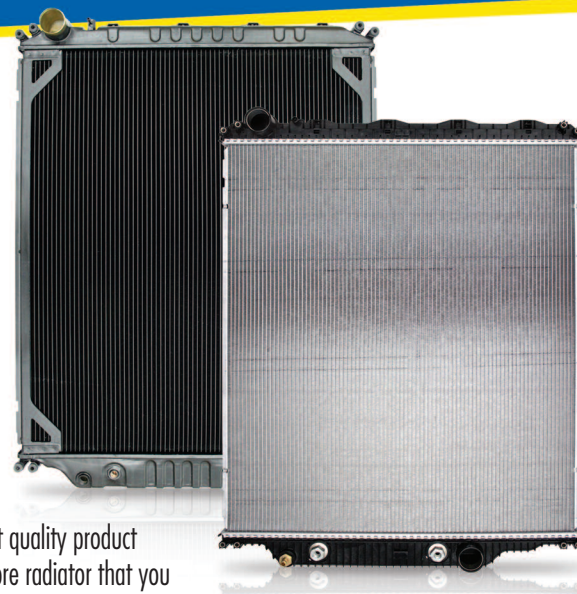

PART #	MAKE/MODEL without Frame	OEM #	PART # with Frame
<b>238601</b>	Int'l/Navistar '03-'07 8600, 8600i, 9100, 9100i, 9200, 9200i, 9400, 9400i, 9900i Series	2508454C91, 2508454C92, 3E0115430000	-----
<b>238603</b>	Freightliner '04-'06 Columbia, M2 with Mercedes Engine	BHTD0535, D0535, D9526	-----
<b>238611</b>	Freightliner '07-Newer Cascadia, Century, Columbia	3E01228, 1A0201190021, 0529617009	<b>238684, 238709</b>
<b>238612</b>	Freightliner '08-'13 M2, '08-'10 Cascadia, Sterling 9500 Series	1A0201220032, 052661922, 0527751066	-----
<b>238617</b>	Freightliner '04-'07 M2 Bus with Mercedes Engine	BHT91657, BHTD2342, D2342	-----
<b>238632</b>	Freightliner 07-'09 Cascadia	0526678001, 0526621001	-----
<b>238638</b>	Kenworth '06-'11 T660, '08-'15 W900, 2014 T880	N4020001, F3160881101120, F3160881105100	-----
<b>238648</b>	Peterbilt '08-'13 384 & 386; Kenworth '08-'14 W900	F3160921214310, M3265001, BHTH4102, H4102	-----
<b>238652</b>	Freightliner '08-Newer Columbia with PTO, Sterling LT 9500	1A0201220012, 3E0120460001, 3E11548	<b>238746</b>
<b>238695</b>	Int'l/Navistar '04-Newer 7300-7700 Series	286042C91, 2586039C91, 2507375C91	-----
<b>238697</b>	Int'l/Navistar '02-'07 7300-7700 Series	2586038C91, 1S180075, 2508431C91	-----
<b>238698</b>	Int'l/Navistar '08-'09 7300, 7400, 7500 Series	2591761C92, 1S180186, 3E113970000	-----
<b>238759</b>	Ford '94-'97 and '01-Newer L, LTL9000, Sterling, Silver Star, Freightliner 1300	F4HT8009FC, F4HT8009FB, 1040145	-----
<b>239010</b>	Freightliner '03-'10 Century Series, Coronado	B5325, C8989, 75080, BHTC8987	-----
<b>239048</b>	Mack '08 CHU Series, '08-'13CHN Series, GU Granite E Models, Volvo '08-'14 VHD Series	21504550, 85125540, 21593033	-----
<b>239050</b>	Mack '08-'10 Granite, Volvo VHD Series	S5751, S5589, Y8075, 85112703, 21504540	-----
<b>239077</b>	Freightliner '06-'09 M2, MC, MM Models	B9705, B9696, D9454, BHT74683	-----
<b>239086</b>	Freightliner '07 Columbia, '08-Newer Cascadia	1A0201190020, 3E0118600004, A0526615020	<b>238685</b>
<b>239087</b>	Freightliner '08-'13 M2 / 106 Business Class, '08-'09 Sterling Acterra	BHTT3152001, T3152001, S2726001, P4022001	-----
<b>239089</b>	Volvo '06-'08 VT, V2 Models	20517559, G5713, G5719, G0440100	-----
<b>239123</b>	Mack CX, CXN61; Volvo '97-Newer VN, VNL, VNM Models	8113190, 81493, 3MF5544M4, 3100801	<b>239141, 239154</b>
<b>239142</b>	Freightliner '02-'07 FLD, Century, Classic XL, Sterling 9500 Series	BHTA4727, V0225001, E3760, V0225100	-----